



Messenger of Hope Assembly Instructions



Thread one silver crimp (tiny silver cylinder) onto one end of the braided cable wire.

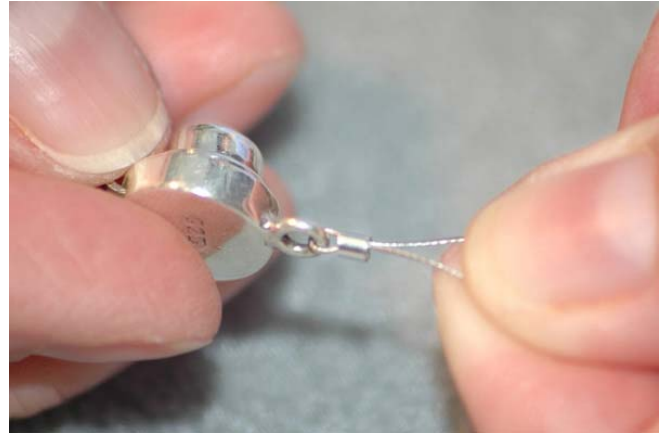

Thread the cable through the ring of the main part of the pearl clasp, back through the crimp and pull tight. To secure the crimp, finesse it by pulling the crimp toward the clasp with your thumb nail then pulling the wire cable again.

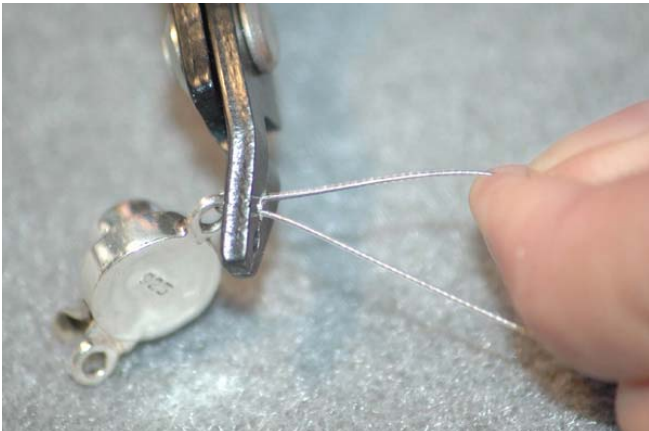

Make sure the wire is spread apart and not crossed. Hold the ends of the cable and squeeze the crimp tightly in the second notch of the crimping tool. The crimp should have a small ridge between the two wires.



Then fold the crimp by clamping it in the first notch of the crimping tool. (Opposite view above)



Crimp should be folded flat and tight without slipping and approximately 1-1/2" of cable protruding. (opposite view)



After snugly crimping the wire on to the main part of the clasp, slide on the charm making sure the front of the ribbon is facing up in the same direction as the clasp top. Tuck both wire ends through the ring of the charm.

Messenger of Hope Assembly Instructions



Then thread both ends of the wire through one silver bead cap, dome side first.



Next add one rose quartz bead, threading both strands of the cable through the bead.



Separate the strands...



Snip the short wire close to the bead and proceed with beading. Make sure all rose quartz beads face the same direction.



The wire tag will be concealed when the next silver cap is added on the opposite side of the bead...




Next, add a pearl...

Messenger of Hope Assembly Instructions



After the silver daisy spacer, add a pink crystal bicone, then another daisy spacer, and a second pearl...

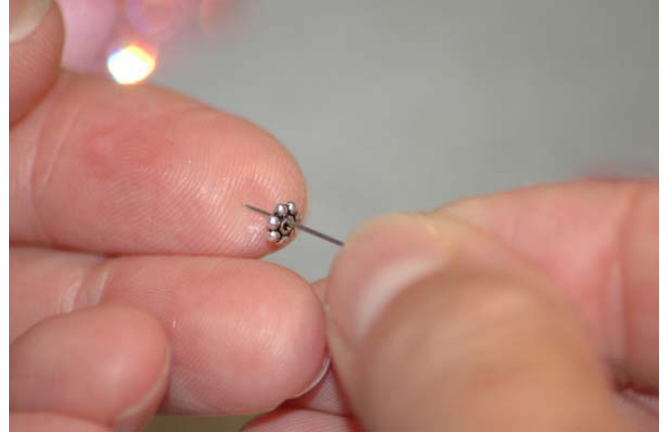

Then add a silver daisy spacer...



Add another cap, dome side first (dome is shown to the right side above) ...



Add another rose quartz bead with the carving facing the same direction as the first...



After the silver daisy spacer, add a pink crystal bicone, then another daisy spacer, and a second pearl...



When you have reached the desired length of bracelet, add a crimp...

Messenger of Hope Assembly Instructions




Thread the remaining wire through the ring of the tongue end of the clasp...



Loop the cable...



... back on itself and through the crimp...

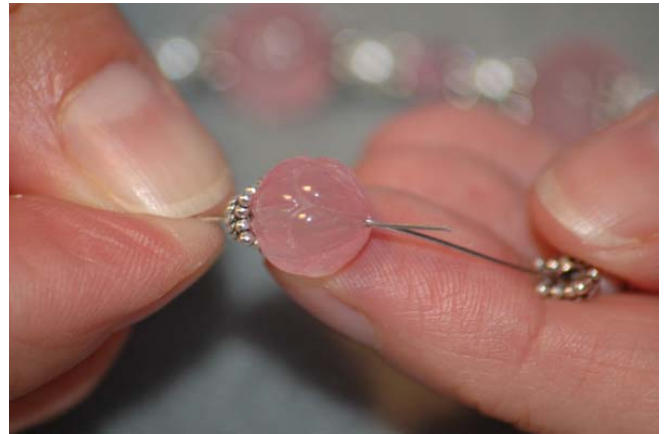

Again, thread the wire cable back through the last cap and rose quartz bead...



Pull the wire tightly, then push the crimp, the silver cap and the rose quartz bead back towards the other beads.



Before opening the clasp, check the opposite end of the bracelet. The wire tag sometimes slips out of the rose quartz bead while making the bracelet.

Messenger of Hope Assembly Instructions



Thread the tag back through the rose quartz bead and proceed.



Release the clasp...



Hold the clasp tongue and let all the beads settle...



Now, you will need to finesse the wire and crimp until the beads are snug... Again, pull the wire tightly, then (with your thumb nail) push the crimp, silver cap and the rose quartz bead back toward the other beads. Repeat this process of pulling the wire and pushing the crimp and beads back several times.



Then use the pliers to finesse the wire and crimp...pulling the wire and pushing the crimp with your thumb nail and again pulling the wire until the beads are snug but relaxed. (The bracelet can bend but the beads don't slide.)



Once the wire and beads are settled, crimp the entire crimp tightly. Check the crimp and crimp again until the entire crimp is secure.

Messenger of Hope Assembly Instructions



Snip the extra wire as close to the rose quartz bead as possible. The next silver cap should conceal any wire tag.



Fini...!